

Assembly Instruction Sheet #IS-5008P6ST
For Style 5008P6ST

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) G3 Base Bulb 40W Maximum (Not Include).

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

- 

A] Fixture Body x1
- 

B1 4" 2pcs
- 

B2 6" 1pcs
- 

B3 12" 5pcs
- 

C] Ceiling Canopy x1
- 

1] Crystal x6
- 

2] Crystal x1
- 

14mmx7PCS
- 

30mmx1PCS
- 

14mmx4PCS
- 

30mmx1PCS


Hardware Contents

PART	DESCRIPTION	QUANTITY
BB	Wing nut	2pcs
CC	Outlet Box Screw	2pcs



STEP 1 – Install Rods to Fixture Body

A. Thread the power cord to the Middle Rods, fix the Middle Rods with the Fixture body then the same to connect the other pieces of Rods, finally fix the Canopy with the Rods.

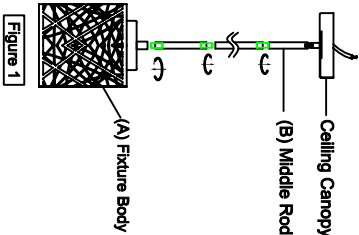

STEP 2 – Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting Bracket.

A. Line up a set of holes on the Mounting bracket (EE) and Holes on the ceiling canopy. Thread Mounting Screws (DD) into the holes on the Mounting bracket (EE). Pass Lock Washers and thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.

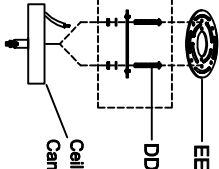


Figure 2

STEP 3 – Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws. Tighten until snug.

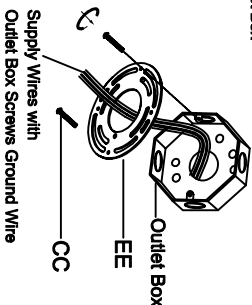


Figure 3

STEP 4 – Install Ceiling Canopy to Ceiling

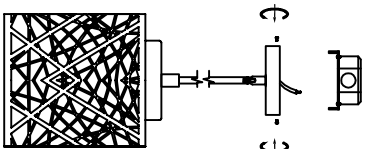


Figure 4

STEP 5 – Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

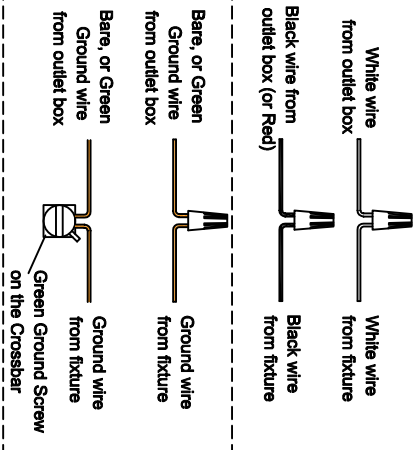


Figure 5

STEP 6 - Install bulb and Crystal

A. Install bulbs into sockets and screw snug into place. B. Please Put the crystal to the fixture .

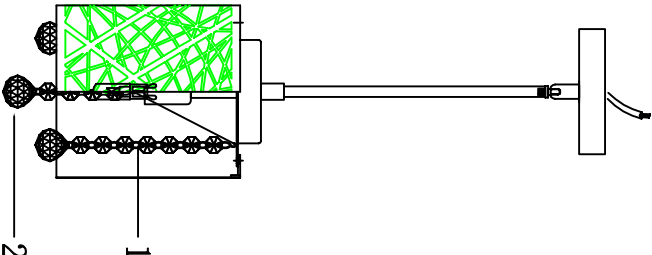


Figure 6