


Assembly Instruction Sheet #IS-5443P14(Off White)  
For Style 5443P14(Off White)

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (3) E26 Candelabra Base Bulbs 60W Maximum(Not Include).  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

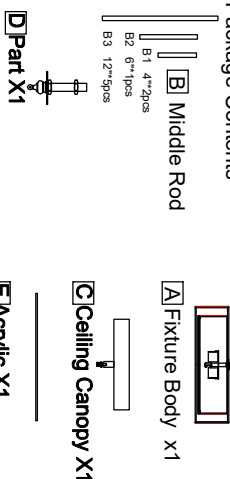

STEP 1- Release Mounting bracket from Ceiling Canopy .

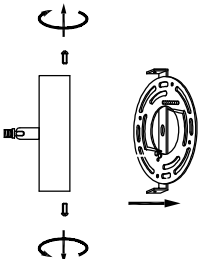


- |               |              |              |
|---------------|--------------|--------------|
| 50mmx1PCS     | 14mmx1PCS    | 14mmx2PCS    |
| 1 Crystal x12 | 2 Crystal X8 | 3 Crystal X5 |


Hardware Contents

| PART | DESCRIPTION | QUANTITY |
|------|-------------|----------|
| BB   | Wire nut    | 2pcs     |
| CC   | Screw       | 2pcs     |

STEP 2-Install Rods,Ceiling Canopy to Fixture Body.

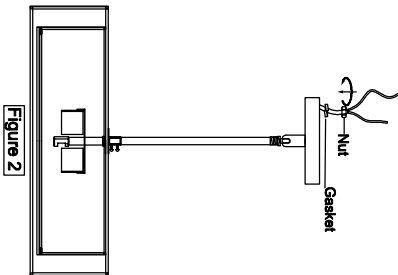

STEP 3 - Attach Mounting bracket to Outlet Box  
A. Pass the supply wires through the Mounting bracket (EE).  
Attach the Mounting bracket (EE) to the Outlet Box  
with the head of the Green Ground Screw facing you.  
Secure it with Outlet Box Screws (CC). Tighten until snug.

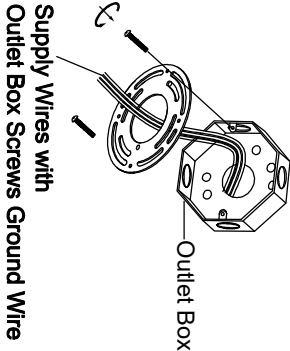

STEP 5 - Install Ceiling Canopy to Ceiling



Figure 3

Figure 5

STEP 4 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

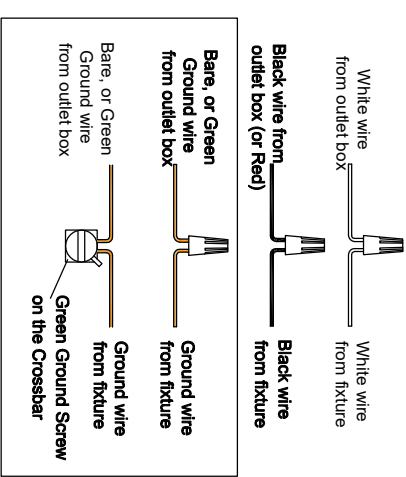


Figure 4

STEP 6 - Install Acrylic and Bulbs.

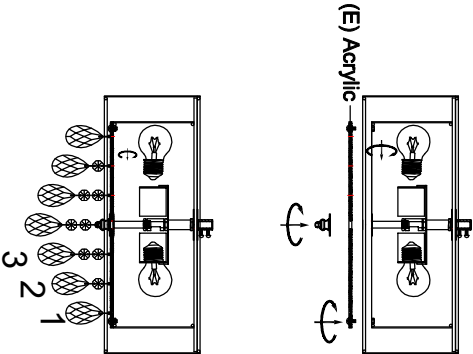


Figure 6